


TAGGING GUN INSTRUCTIONS


1

Insert either end of the fastener connecting bar into the feed slot at top of the gun. Push the clip into the slot as far as it will go. Gun is now ready to use.

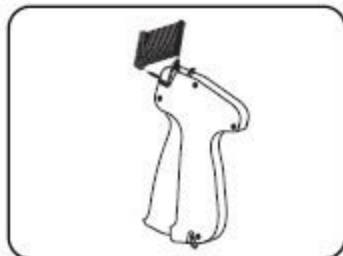

2

Insert the needle through the tag hole and fabric. Hold gun firmly against the merchandise and squeeze the trigger fully.

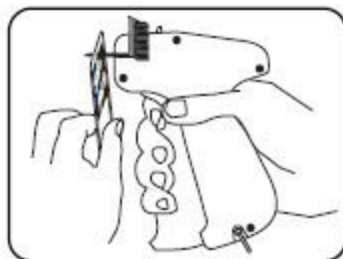

3

Release trigger completely and withdraw the needle. The tag should be securely fastened.

**FOR SAFETY --KEEP
NEEDLE GUARD ON
WHEN GUN IS NOT
IN USE**




4

To remove a clip of fasteners, press the release button downward and pull the clip out of




REMOVING THE NEEDLE

To remove the needle, turn the needle lock lever ahead as shown.

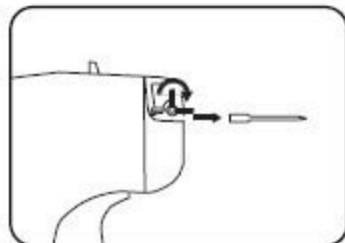

REPLACING THE NEEDLE

To replace needle, insert with the slot in the needle lined up with the slot in the gun. Turn the needle lock toward the rear of the gun to lock the needle in place.

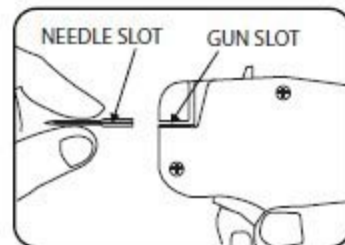

CLEARING JAMS

If a fastener jams, first release the trigger and remove the needle. Carefully remove the jammed fasteners from the gun or needle. *Do not continue to squeeze the trigger if the gun is jammed.*

