



Thermal Receipt Printer

Barcode Printer Quick Start Guide

 
Please keep this guide for reference

Packing list

- 1.The barcode printer
- 2.Power adapter
- 3.US cable
- 4.Power cord
- 5.Quick start guide
- 6.CD



Quick Start Guide

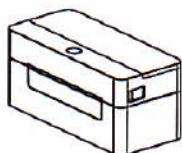


Printer



CD



 USB Cable





Power Adapter




Power Cord

  Part names

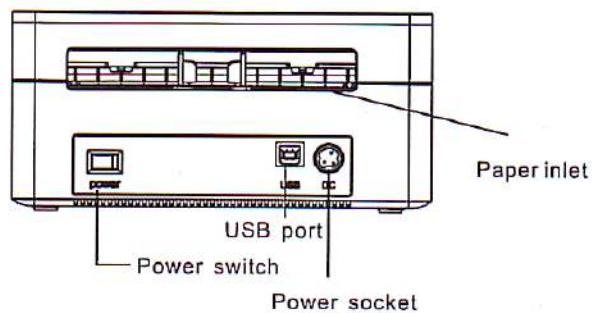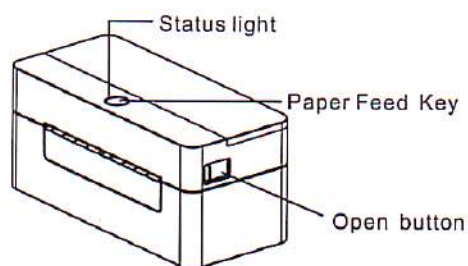

Connect to the power

 - (1). Place the printer on a stable surface and make sure the power is off.
- (2). Connect the two ends of the USB data cable to the printer and the host computer respectively.
- (3). Plug the power cord into both the printer and the power socket.

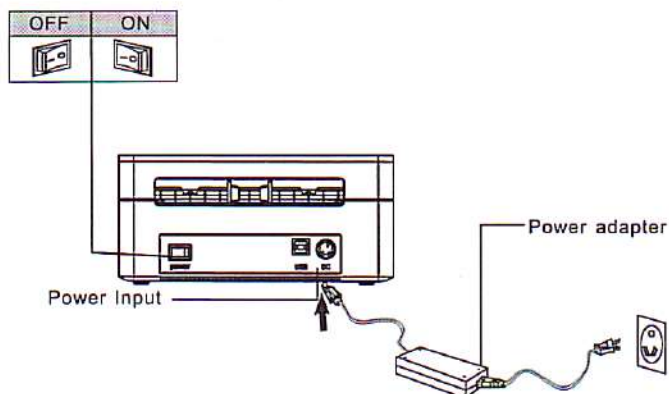

Note: Please ensure the printer is powered off before connect to the power.

3

Feed key, Auto paper detection

1. The functions of the Feed key

(1) Feed paper

When the printer is ready, press the feed key, will feed the paper to the next label.

(2) Pause the printing job

When the printer is printing, press the feed key, the printing job will be paused and the LED is blue blinking. Press the feed key again, the printing job will be resumed.

2. Auto paper detection

This printer has the ability to automatically detect the media height when the media changed. When feeding the first label or sheet, and close the printer's cover, the printer will run the paper detection then ready for printing.

 
Warning

This manual contains proprietary information of this printer manufacturer. It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express written permission of this printer manufacturer.

5

Loading media

- (1). Push the open button to open the cover
- (2). Put the media to the sheet box
- (3). Guide the media through the paper guide, pull over the roll.
- (4). Close the cover carefully.

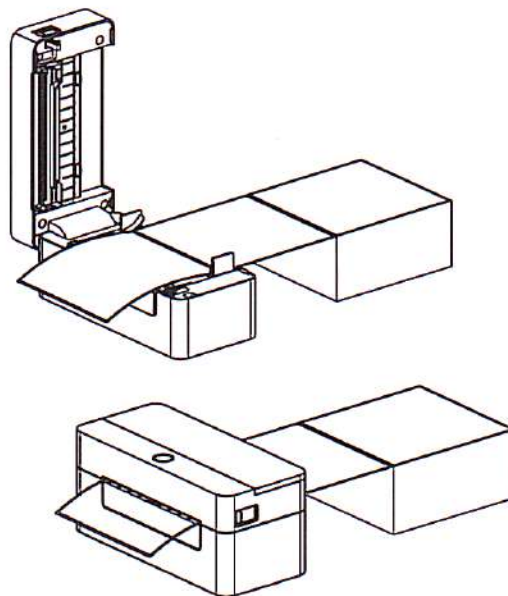

Note: Please make sure the cover is firmly closed.

4

Cleaning and Maintenance

Following these simple maintenance guidelines will ensure longer life with quality printing performance.

General Cleaning - Keep the outside your printer clean by periodically wiping it with a soft cloth dampened with water. Do not use abrasive cleaners as they will damage the surfaces.

Cleaning the Print Head - When handled during installation, and over time, the print head may become contaminated resulting in poor print quality. After installing a new print head or after using a roll of media, rub the cleaning pen across the dark area of the print head. Allow the print head to dry for one minute before loading labels.



Shock HAZARD - Always turn off the printer before cleaning.



Avoid touching the print head whenever possible. To remove dirt or dust, always gently clean the print head with a cleaning pen or a cotton swab moistened with 70% isopropyl alcohol.

6